# Week 12 Bridge

### 457.308 Construction Methods and Equipment

Department of Civil and Environmental Engineering
Seoul National University

Prof. Seokho Chi

shchi@snu.ac.kr 건설환경공학부 35동 304호

## History of Bridge Development

### Natural Bridges



Clapper Bridge

- Tree trunk
- **⊸** Stone

#### 700 A.D. Asia



**Great Stone Bridge in China** 

Low Bridge
 Shallow Arch

Circular segment
First open-spandrel w/
two small side arches:

- lighter weight
- flood control

(1) Install forms(2) Build tapered stonesabove the forms





Roman Arch Bridge

- The Arch
- Natural Cement

⊶Strength of Materials

□ Development of Metal

100 B.C. Romans

1300 A.D. Renaissance

## History of Bridge Development

1800 A.D.



Truss Bridges

→ Mechanics of Design

1900 A.D.

2000 A.D.



Prestressed Concrete

Steel



First Cast-Iron Bridge

Coalbrookdale, England



1850 A.D.




Suspension Bridges

Use of Steel for the suspending cables

1920 A.D.



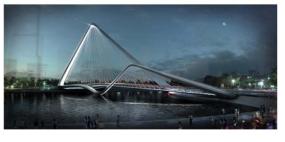

## Bahrain's North Manama Causeway



## How Bridges Work?


"Every passing vehicle shakes the bridge up and down, making waves that can travel at hundreds of kilometers per hour. Luckily the bridge is designed to damp them out, just as it is designed to ignore the efforts of the wind to turn it into a giant harp. A bridge is not a dead mass of metal and concrete: it has a life of its own, and understanding its movements is as important as understanding the static forces."



#### **ABUTMENT**

### **Basic Structure**

Bearing to load of the top structure and acting as a retaining wall to soils

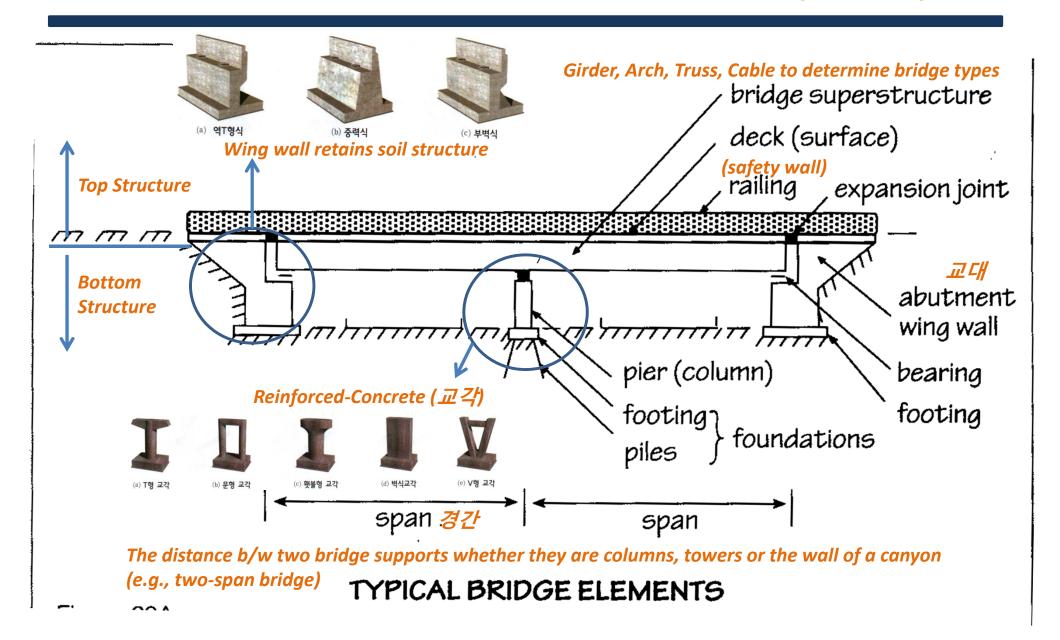

### **Basic Structure**



### • Bearing (교좌장치)

- Transit loads from the top structure to the bottom structure
- Resist to earthquake, wind (horizontal vibration), temperature changes (expansion and deflection/displacement)

### • Expansion joint (신축이음장치)

- Placing gaps to prepare for concrete expansion by temperature changes,
   concrete creep, dry shrinkage, and live load
- Finger type and Rail type (이음새 고무 용착)










(a) finger type

(b) rail type

### **Basic Structure**

Drainage facility



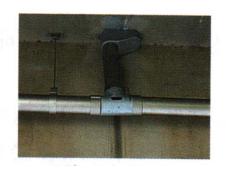




Maintenance facility (fixed and movable)







• Bridge Types Depending on Deck Positions

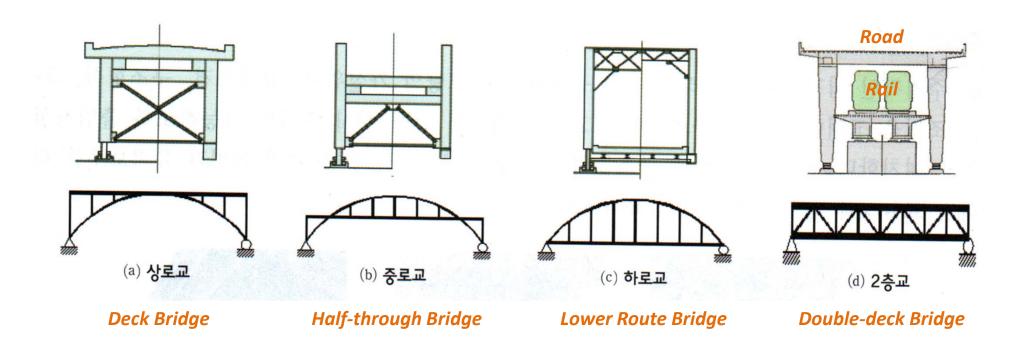


Bridge Types Depending on Support Types




### <u>Single Span Bridge (단순교)</u>

- Separated spans/decks
- 정정구조물로 구조해석이 쉽고 시공이 간편
- 처짐이 커서 긴 지간에 는 적용이 곤란, 차량의 주행성이 떨어짐, 소규모교량, 철도교

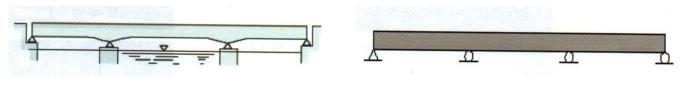

### <u>Continuous Span Bridge (연속교)</u>

- Continuous deck
- 부정정구조물로 처짐이 작아 긴 지간에 적용
- 해석이 복잡함, n 경간 연속교

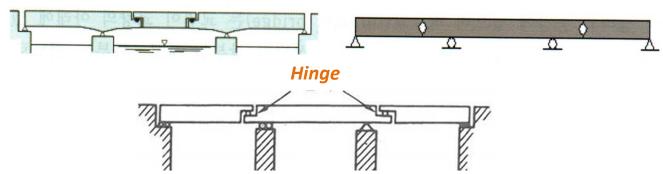

### *Gerber(게르버) Bridge*

- Adding hinges to the continuous span bridge to convert "indeterminate" to "determinate" - 구조해석이 쉬우나 한지 사이의 보가 과다하게 처지는 문제가 있음

### Bridge Types Depending on Deck Types




**RC Slab Bridge**Should avoid long-length
due to increase self-load



Hollow Slab Bridge Reduce self-load with holes

### Slab bridge

- Slab top structure: short-length span (single span: 5-15m, continuous span: 10-30m)
- Low-height top structure (1/16-1/20 of the bridge length)

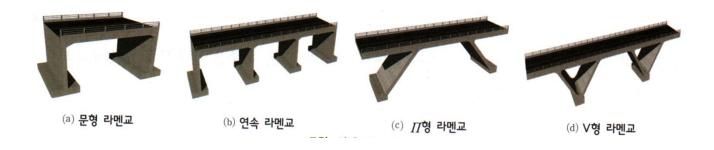


#### Rahmen(Rigid-Frame) Bridge

- Connected top and bottom structures
- Economical with low-pier-height and short-span bridges
- No need for expansion joints till50m
- Spaces under the bridge for overpass road or river crossing
- Easy maintenance, good appearance

The weight of the girder pushes straight down on the piers

### Bridge Types Depending on Deck Types: Girder Bridge

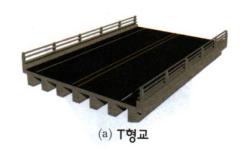



### T-Shape (T 형교)

- Usually used for short spans (30m)
- Less self-load than slab bridges
- Double T-shape: 50m span with prestress, horizontal tendons due to a big gap b/w girders





### Plate Girder (강판형교)

- Use I-shape steel girder (50m)
- Require many steel members, complicated
- Low horizontal strength  $\rightarrow$  weak for curved roads





### Plate Box Girder (강상형교)

- Widely used (50-60m)
- Good for curved and widened roads
- Steel box is prefabricated, bolted and welded in the field  $\rightarrow$  fast, easy construction







진도대교 강상판

완도-신지도 연도교

부산남항대교

### Bridge Types Depending on Deck Types: Girder Bridge



#### Steel Plate Box Girder (강상판형교)

- Steel-plate slabs  $\rightarrow$  smaller self-load  $\rightarrow$  longer span (70-80m)
- Expensive due to many steel members
- Complicated field welding of the steel plate, more vibration than concrete slab







그림. 프리플렉스교량

#### **PSC Beam**


- Use pre-stressed concrete girder (20-40m)
- Cheaper construction
- 2m bottom structure for 30m span  $\rightarrow$  require enough bottom spaces  $\rightarrow$  For the limited spaces, use preflex bridges with I beam


#### **TRUSS BRIDGE**

## Bridge Types

Girder bridge strengthened by trusses Lighter than ordinary girder sections of equal length

### • Bridge Types Depending on Deck Types: Truss Bridge

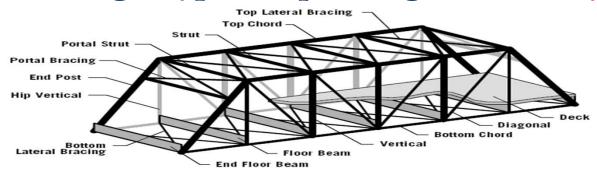


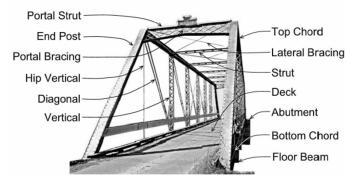

**Howe Truss** 

**Parker Truss** 


Component parts of a typical truss bridge - Isometric View 1

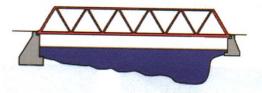





**Warren Truss** 

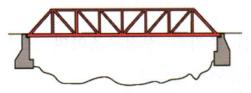







**Pratt Truss** 









K Truss Baltimore Truss

#### **ARCH BRIDGE**

## **Bridge Types**

Instead of pushing straight down, the weight of an arch bridge is carried outward along the curve of the arch to the supports (abutments) at each end

### Bridge Types Depending on Deck Types: Arch Bridge








2-Hinged Arch

Widely used, Good appearance and economical Applicable to sound ground conditions Applicable to over 300m with truss braced ribs

3-Hinged Arch

Possible deflection in the center hinge Less durability, Not used that much

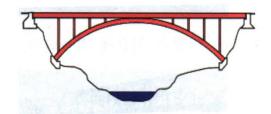







#### **Fixed Arch**

Most economical arch
Higher fixed moment → for sound ground conditions
Less deflection due to higher durability
Usually used for concrete bridge (difficult to apply hinges)

#### **Tied Arch**

Less horizontal loads to the tie → Applicable to poor ground conditions

Bigger loads to arch rib → Bigger rib thickness are used thus less economical

- Bridge Types Depending on Deck Types: Cable Stayed Bridge (사장교)
  - The cables are attached to the towers, which alone bear the load
  - For long-span bridges, self-load becomes bigger thus need supports by the tower
  - In a radial pattern, cables extend from several points on the road to a single point at the top of the tower
  - In a parallel pattern, cables are attached at different heights along the tower, running parallel to one other.





- Bridge Types Depending on Deck Types: Suspension Bridge (현수교)
  - The cables ride freely across the towers, transmitting the load to the anchorages at either end which are imbedded in either solid rock or massive concrete blocks
  - Aesthetic, light and strong, but most expensive to build





그림. 타정식 현수교(광안대교)







그림. 자정식 현수교(영종대교)

#### Earth-Anchored(타정식)

- The cables are fixed to anchorages
- No effect to stiffening girder (보강형) thus easier structural analysis and design
- Require big mass of anchorage  $\rightarrow$  less attractive, more expensive with poor ground conditions

#### Self-Anchored(자정식)

- Directly fix cables into the stiffening girder
- Complicated structural analysis and design
- No need for the large anchorage

### • Bottom Structure: Pier (교각)

 When constructing many piers in the river, it reduces the cross section area of the river, which increases fluid velocity and scouring. To prevent flood, the cross section of pier needs to be designed as circular or oval shapes




(a) 기초 콘크리트



(b) 교각 콘크리트



(c) 코핑부 콘크리트

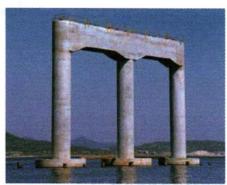


(d) 교각 시공 완료

### • Bottom Structure: Pier

- Sliding Form
  - Assemble the concrete form at the bottom at the beginning and continuously lift the form to the top without form removal by using hydraulic jacks
  - Once the concrete is cured and reach the desired strength without deformation, the form moves up to the next height
  - Possible to construct 1 story each day
  - Good for chimney, cooling tower, silo, pier, bridge tower, etc.
  - No connection line, save form disposal, improve worker safety
  - No stop from the bottom to the top: 24-hour working, require accurate skills and construction methods (no cold joint), not economical for the short height



• Climbing Form

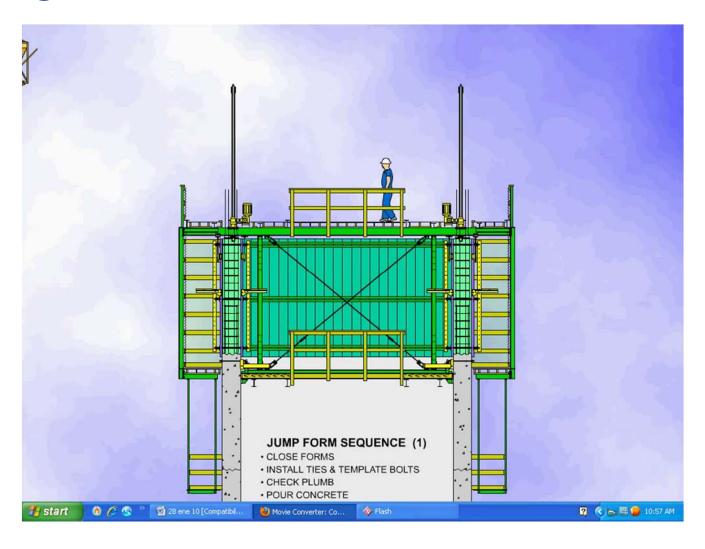

### • Bottom Structure: Pier

- Climbing Form
  - Similar concept with the sliding form, but remove forms for each story and do not use hydraulic jacks (normally use tower crane)
  - Takes longer time (5-6 days for 1 story)
  - One form unit is about 4-6m
  - Uniform placement height, more traditional method that is more familiar with workers → good productivity
  - Equipment cost, safety risks at the high height (e.g., wind) especially for form removal operation, falling risk of workers working in gang forms






- Top Structure: FSM (Full Staging Method, 동바리공법)
  - For good ground strength and short height bridges
  - Install supports to the entire span to bear loading of concrete, forms, and working platform

**Fixed Supports** 







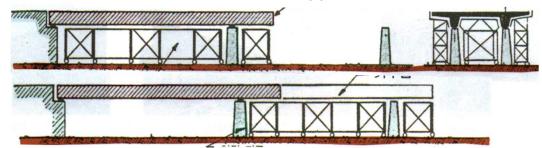



### Whole Support (전체지지식)

- Flat ground and smaller than 10m height
- Simple installation and easy construction
- Steel or wood supports evenly bear the distributed loads of the top structure
- Need for no concentrated loading during concrete placement

• Top Structure: FSM (Full Staging Method, 동바리공법)



### Pillar Support (지주지지식)


- Uneven ground and obstacles on the ground
- Larger than 10m height
- For poor grounds, need to drive piles




### Girder Support (거디지지식)

- River having poor ground condition
- When difficult to install supports between spans
- For the cross section bridges
- When needs to use the under spaces
- For large height bridges


- Top Structure: FCM (Free Cantilever Method, 캔틸레버공법)
  - Use form traveler or moving gantry to balance left and righthand sides of the bridge instead of installing supports and construct 2-5m girders step-by-step
  - When support installation is difficult
  - Used for PC box girder, suspended, arch bridges

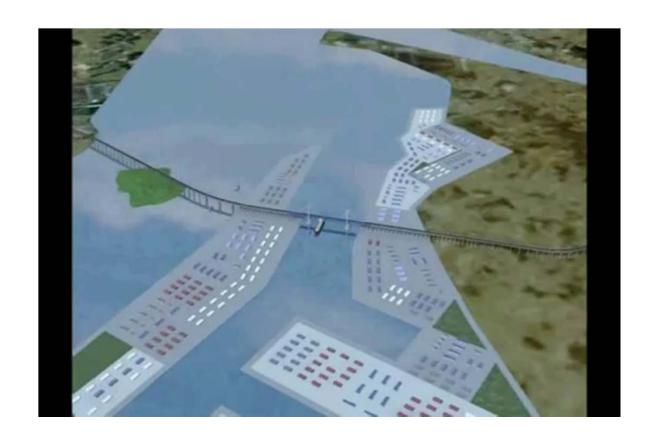


## Bridge

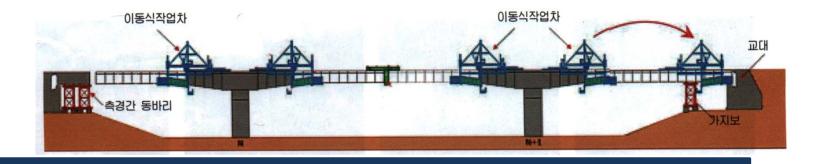


- Top Structure: FCM (Free Cantilever Method, 캔틸레버공법)
  - Super-capital (주두부) construction: about 90 days

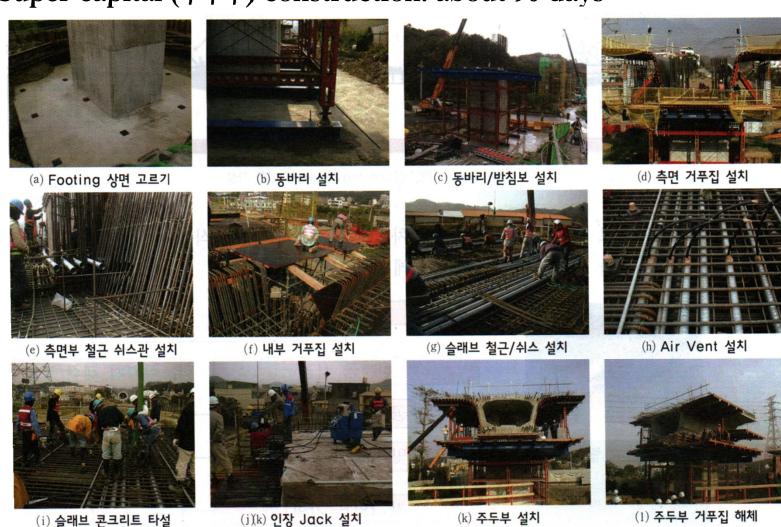


#### 인장정착구 VSL Type EC

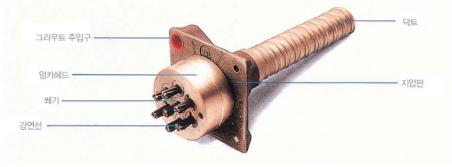

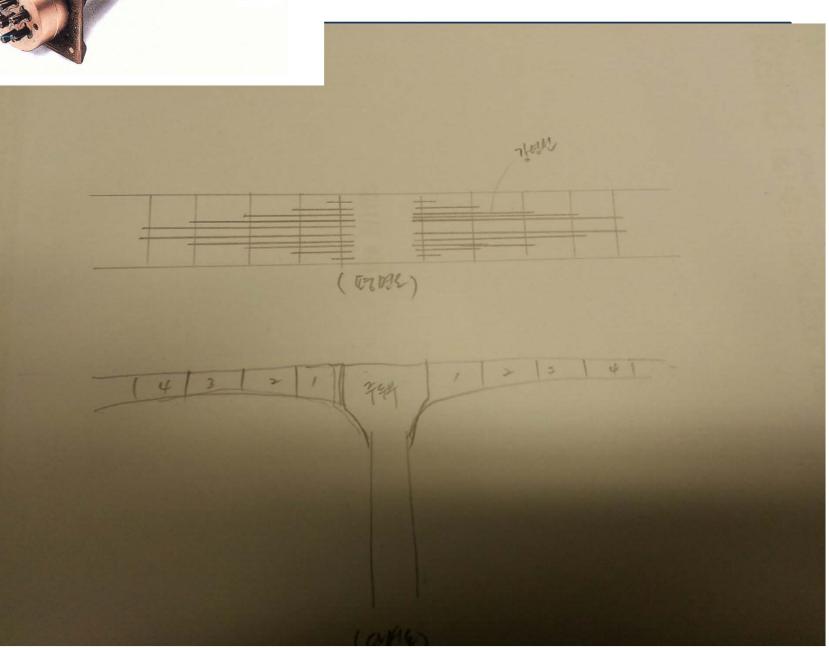


### 강연선 배치 개요도

배치 개요도 S=1:500 적용설계법 : 허용응력설계법, 강도설계법 설계기준강도 : 콘크리트 fck = 40 MPa 청 근 fy = 400 MPa 강 선 fpu = 1,900 MPa 설계하중 : DB-24, DL-24

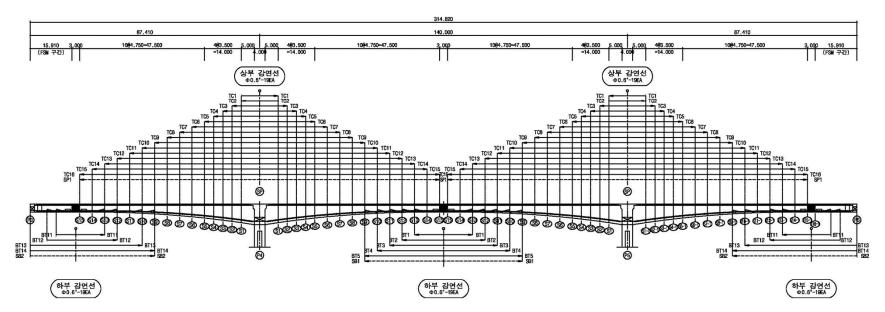

강선번호	강선길이(뵘)	며유긴장길이(M)	텐던개수(EA)	먹트길이(≌)	총강선길이(N)	인장정착구 개수(EA)	고정정착구 개수(EA		
TC1	14.000	2	4	56.000	64.000	4	4		
TC2	14.000	2	4	56.000	64.000	4	4		
TC3	21.000	2	4	B4.000	92.000	8	0		
TC4	28.000	2	4	112.000	120.000	8	0		
TC5	35.000	2	4	140.000	148.000	8	0		
TC6	42.000	2	4	168.000	176.000	8	0		
TC7	51.500	2	4	206.000	214.000	8	0		
TC8	61.000	2	4	244.000	252.000	8	0		
TC9	70.500	2	4	282.000	290.000	8	0		
TC10	80.000	2	4	320.000	328.000	8	0		
TC11	89.500	2	4	358.000	366.000	8	0		
TC12	99.000	2	4	396.000	404.000	8	0		
TC13	108.500	2	4	434.000	442.000	8	0		
TC14	118.000	2	4	472.000	480.000	8	0		
TC15	127.500	2	4	510.000	518.000	8	0		
TC16	137.000	2	4	548.000	556.000	8	0		
SP1	137.000	2	4	548.000	556.000	8	0		
	*	계		4934.000	5070.000	128	8		

강선번호	강선길이(N)	며유긴장길이(M)	텐던개수(EA)	덕트길이(M)	총강선길이(법)	인장정착구 개수(EA)	고정정착구 개수(EA)		
BT1	22.000	2	2	44.000	48.000	4	0 0 0 0		
BT2	31.500	2	2	63.000	67.000	4			
ВТЗ	41.000	2	2	82.000	86.000	4			
BT4	50.500	2	2	101.000	105.000	4			
BT5	60.000	2	2	120.000	124.000	4			
SB1	60.000	2	2	120.000	124.000	4	0 4 4		
BT11	18.500	2	.4	74.000	80.000	4			
BT12	26.750	2	4	107.000	113.000	4			
BT13	42,750 2		4	171.000	177.000	4	4		
BT14	47.500 2		4	190.000	196.000	4	4		
SB2	47.500	2	4	190.000	196.000	4	4		
	*	계		1262.000	1316.000	44	20		

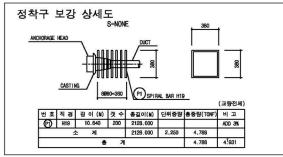

- 1. 강연선의 종류는 KSD 7002 SMPC7B 0.6\*(Φ15.2MM)이며 저럴렉세이션 강재를 사용한다. 2. 프리스트레이싱의 즉시 손실량 산출시 적용계수는 다음과 같다.
- 상부 : 곡물마월계수:0.20/rad 파상마월계수:0.0020/m, SLIP량:GMM 하부 : 곡물마월계수:0.25/rad 피상마월계수:0.0050/m, SLIP량:GMM
- 콘크리트의 실계기준 강도는 40MPa이며, 콘크리트의 초기압축 강도가 20MPa 이상일때 긴장작업을 시작하도록 하며, 그 이하의 경우에는 구조계산을 실시하고 이상이 없을을 증명하여 감독원의 승인을 독한후 시행한다.
- 4. 정착구 표시기호

				일단 긴장	0	
-	고점 정착구		-	양단 긴장	-	여유 긴장구
도입 긴장려 : 주두	구부 - 삼부:	f = 0.75 f <sub>pu</sub> = 1	,425 I	wPa 주두부 외 ┰ ·	삼부: f = 0.72 f <sub>pu</sub>	= 1,368 MPa

강면선 길이 산출시 일단긴장 및 양단긴장은 여유길이를 2.0M로 적용

이런데어티 오지그	사 업 명 덕적~소야간 연도교 건설공사 기본 및 실시설계		Δ						위치정보					
인천광역시 옹진군	1 0	77 = 10 0 = 0 0 0 1 10 0 0 0 10 10			Δ						11-10-		도면명	강연선 배치 개요도
11 V 12-	시설/공구				Δ				207		축 척	S=1:NONE		000 1101 11-1
					A	2014.07		조충영 姓 心火	기호시 세	양병홍 🖍				
(주)평화엔지니어링 (주)서영엔지니어링 극동엔지니어링(주)	ZIMBAL	토목	고나나티네	실시설계						/	E MALE		전원비중	0.000
(1)6424148 (1)4824148 4824148(1)	건설문야	도국	건설단계	실시설계	개정번호	날짜	개 정 내 용	과업책임자	분야별책임자	설계자	도면번호		편철번호	8.035




- Top Structure: FCM (Free Cantilever Method, 캔틸레버공법)
  - Segment Construction (Form Traveler Installation)




Design: 1 month, Manufacturing: 3 months, Installation: 1 months

- Top Structure: FCM (Free Cantilever Method, 캔틸레버공법)
  - Segment Construction (Form Traveler)
    - Normal segment span: 3-5m
    - Concrete placement: low fringe through the opening of the bottom plate → Connection b/w the low fringe and the body → Body → Cantilever → Top plate → Connection b/w the top plate and the body
    - Key segment: connection b/w segments

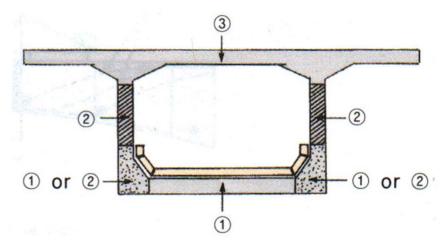

Key Segment: 20 days

- Top Structure: FCM (Free Cantilever Method, 캔틸레버공법)
  - Segment Construction (Form Traveler)

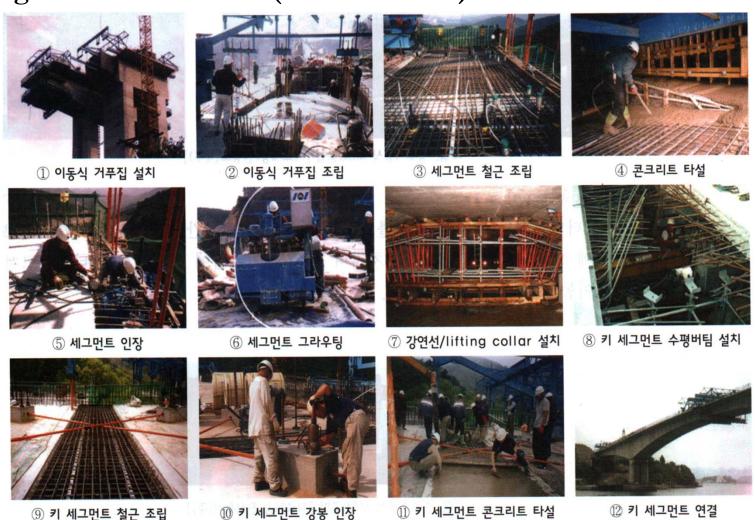

• Top Structure: MSS (Movable Scaffolding System, 이동식 비계공법)



• Top Structure: MSS (Movable Scaffolding System, 이동식 비계공법)



- Top Structure: MSS (Movable Scaffolding System, 이동식 비계공법)
  - Install forms on the movable scaffolding structure and place concrete
  - Above type: hang forms to the above scaffolding structure








- Below type: structure supports forms






- Top Structure: MSS (Movable Scaffolding System, 이동식 비계공법)
  - Advantages
    - Fast, safe, and productive construction
    - Less labor input and construction under rainy weather if roof is installed
    - Reusable forms and scaffolds
  - Disadvantages
    - Expensive manufacturing of the system
    - Difficult applicable to curved and changeable cross sections

• Top Structure: MSS (Movable Scaffolding System, 이동식 비계공법)

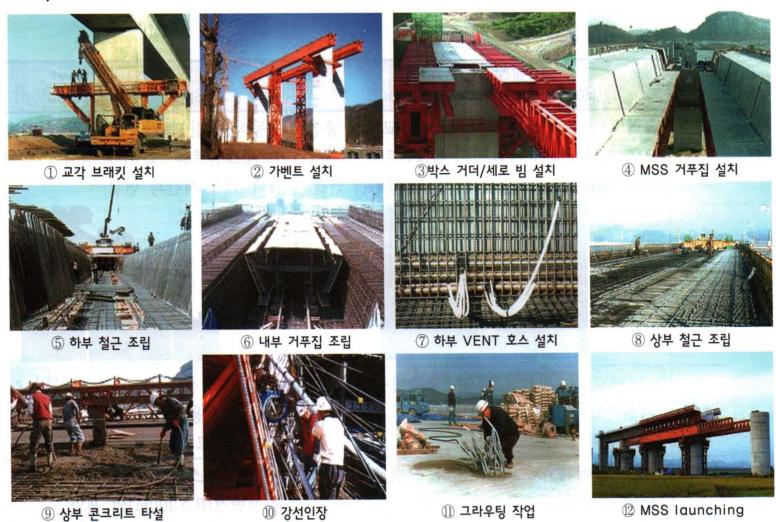

• Top Structure: MSS (Movable Scaffolding System, 이동식 비계공법)

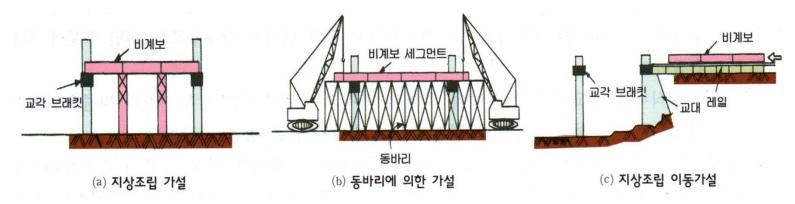


- Place concrete while checking the left-right balance to prevent twisting
- For 1 span: Concrete placement (1 day) → Concrete curing (3 days) →
   Tensioning and detaching MSS (1 day) → Moving MSS (1 day) → Outer form placement (2 days) → Strand, rebar, inner form placement (5 days)
- System design and manufacturing (3 months), installation at field (1.5 month)

- Top Structure: PSM (Precast Segment Method)
  - Structurally same as FCM but use precast segments and connect them based on post tension → faster construction
  - Additional cost for segment manufacturing sites and storage



- Top Structure: PSM (Precast Segment Method)
  - Segment Manufacturing

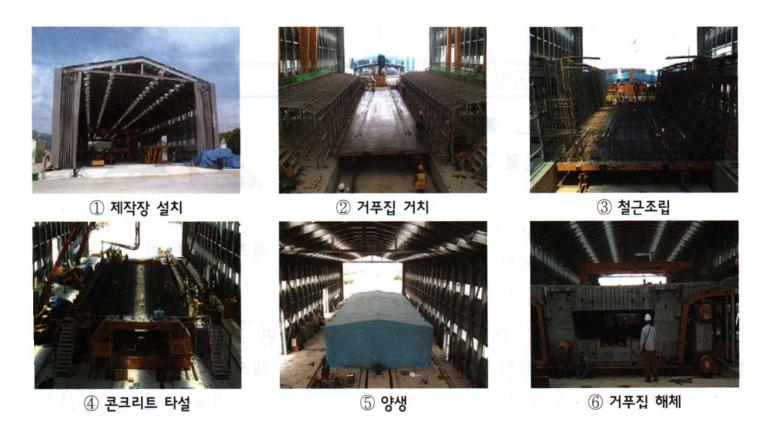


- Top Structure: PSM (Precast Segment Method)
  - Segment Manufacturing
    - Select manufacturing and storage sites as close as to the construction field
    - Do foundation construction for the manufacturing site as well to prevent segment deformation due to settlement
    - Manufacturing site: material storage, strand manufacturing site, segment manufacturing site, concrete batch plant, segment storage for 28 days, curing/water/electricity supply, office, etc.
    - 1 pier segment per 3 days, 2 normal segments per 2.5-3 days



#### **Long Line Method**


- Set up the entire top structure on to the manufacturing facility and manufacture segments while moving one or several forms
- Advantages for changeable bridge cross sections
- Require large spaces
- Easy and accurate manufacturing, Direct curing at the same location

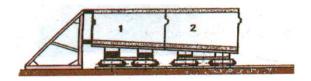

#### **Short Line Method**

- Manufacture segments one by one
- Advantages for uniform cross sections
- Need for moving to storage yards, Difficult manufacturing

• Top Structure: PSM (Precast Segment Method)

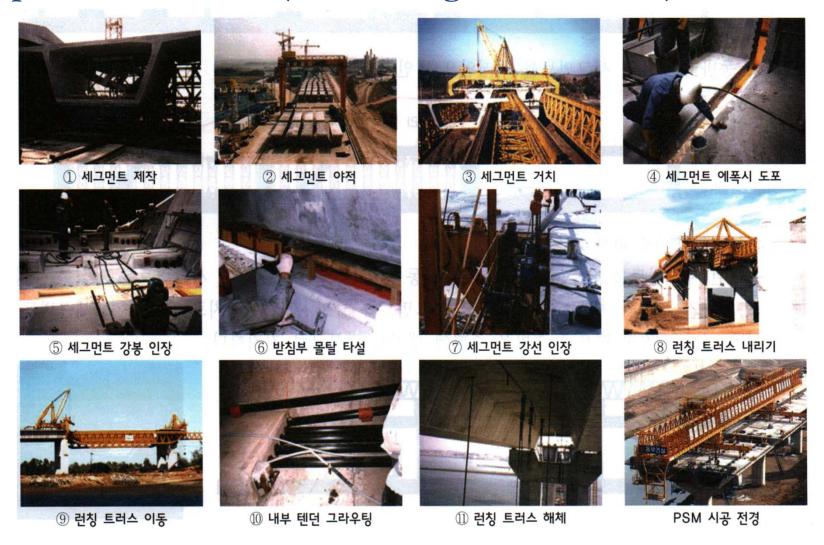

• PSM (Precast Segment Method) - 캔틸레버 가설법

Crane






Crane + Supports





Movable Hoist (끌어올리기만)



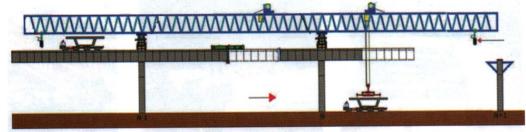


Movable Working Girder (매달아서 운반/가설)






• PSM (Precast Segment Method) – 경간단위 가설법

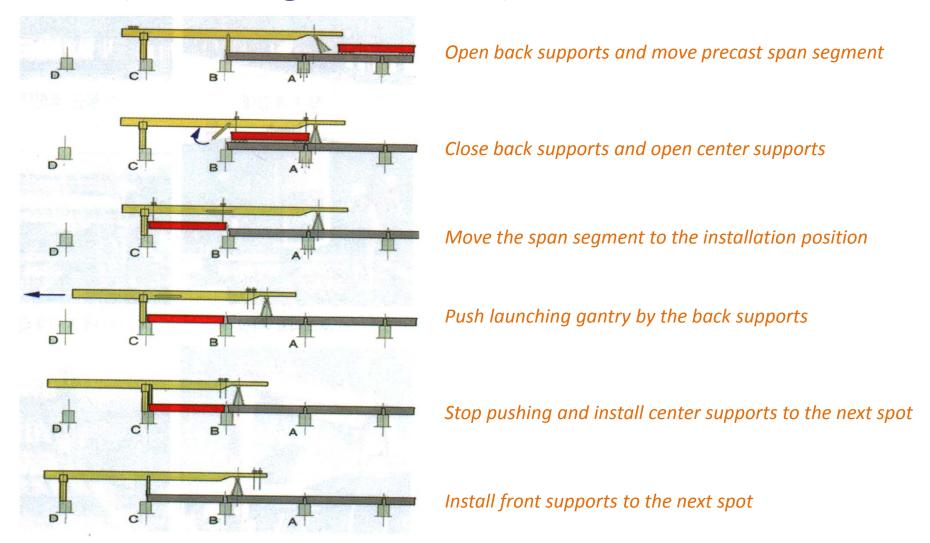

- Top Structure: PSM (Precast Segment Method)
  - Construction Risks
    - Careful mixing of epoxy and hardening agents (에폭시 수지와 경화제 혼합) is required for connecting adhesiveness control
    - Careful deflection control of cantilevers
      - Caused by (1) manufacturing errors, (2) construction errors, (3) design errors especially (as-planned vs as-built)
      - Keep 6mm or less positioning error rates with adjacent segments
      - Keep 0.3% or less vertical installation degree comparing with the design


# Bridge

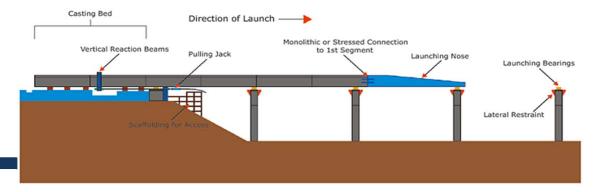

• Top Structure: ILM (Incremental Launching Method, 연속 압출공법)



• Top Structure: ILM (Incremental Launching Method)

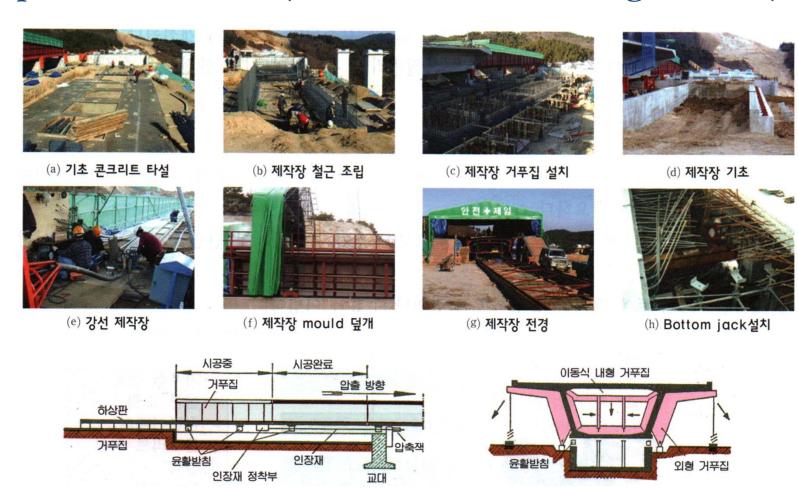








**Breaking Saddle** 

• Top Structure: ILM (Incremental Launching Method)

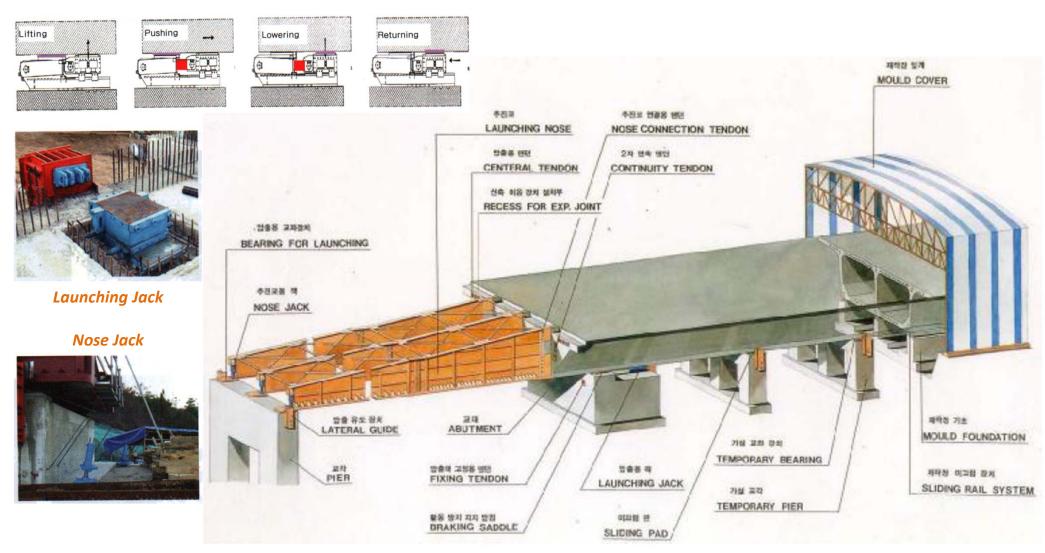

### • Top Structure: ILM (Incremental Launching Method)

- Advantages
  - Easy project and quality control and safe
  - Repeated and fast, easy material management
  - No weather effects
  - Continuous deck for better riding quality

### Disadvantages

- Need spaces for manufacturing facilities
- Applicable for straight or R > 450m bridges: difficult for changeable cross sections and bridge heights
- Applicable for 60m span even considering launching nose and temporary pier
- Expansive first investment cost

• Top Structure: PSC Beam



### • Top Structure: PSC Beam Manufacturing



Careful for Differential
Settlement



Strong Enough to Bear Concrete Forces, Carefully Locate Post Tensioning Anchorage



(c) 거푸집 조립



(d) 콘크리트 타설



(e) **양생** Steam after 3-4 hours from the placement



(f) 거푸집 해체



Post Tensioning
Tensioning from both sides but
better to use 1 hydraulic jack for
uniform force

• Top Structure: PSC Beam Placement



(a) PSC Beam 운반




(b) PSC Beam 거치



(c) Cross beam 설치



(b) 슬래브 콘크리트 타설

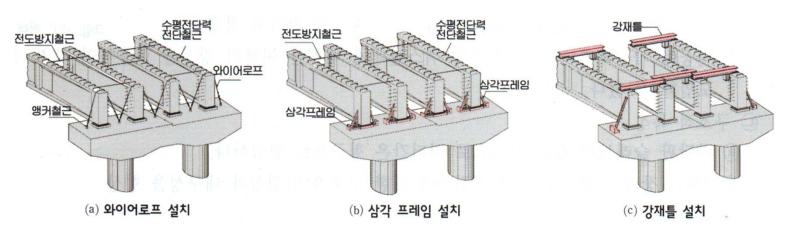

Fixing Beam to Pier & Bolting to Shoe & Immediate Cross Beam Installation

- Top Structure: PSC Beam
  - IPC (Incremental Prestressed Concrete) Girder
    - 일반적으로 PSC 빔은 1회에 긴장력을 도입하여 모든 설계 하중을 받으므로 초기에 모든 설계하중과 긴장력을 받는 큰 단면과 형고가 필요하여 거더 자중이 증가하므로 장경간에 불리
    - IPC 거더는 단계적으로 긴장력을 도입(1차: 제작 시, 2차: 시공 후)하므로 거더 자중이 작아서 장경간 시공이 가능하며 2차 긴장력 도입으로 연속 지점부에 대한 구조적 안전성과 내구성을 향상



(d) 거푸집 제거/양생



(e) 1차강선 인장/그라우팅




(f) 빔 운반/거치



(g) 슬래브 Conc' 타설




(h) 2차강선 인장

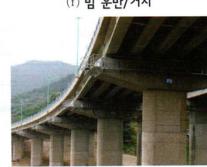

(i) IPC 교량 시공 완료

### Steel Bridges



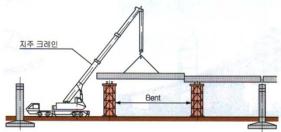

#### **Bent Method**

- Use crane to connect the bridge structures with temporary supports by bents
- Simple and economical
- Construction in a load-free condition, good for curved bridge
- Fast construction, not economical for high height
- Need spaces for crane operation, need for stable ground
- Careful and step-by-step removal of bents considering structural conditions of the entire bridge span






#### **Cantilever Method**


- Good in valley, river, sea requiring high height and frequent spans (difficult for bent installation)
- Continuously connect plate box girder
- Possible one-way or two-way construction (need to keep balancing)
- Very difficult adjustment after placement


• Steel Bridges: Incremental Launching (압출가설공법)



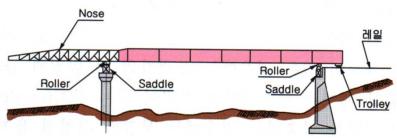


**Launching Nose** 

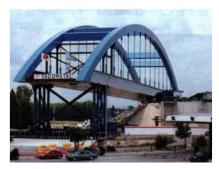

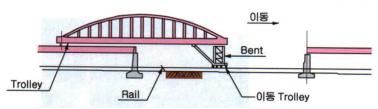

**Movable Bent Trolley** Require rail



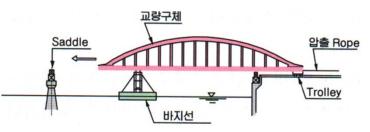


Barge
No rail requirement
Use guide rope for alignment

### Steel Bridges




수직 매달기식
Main rope를 가설용 철탑에 걸쳐 놓고서
직접 빔을 매달아서 조립(아치교, 트러스교 등에 적합)

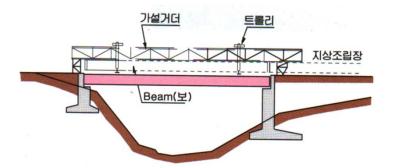

Temporary Girder Method (가설거더공법) 보조 거더를 사용하여 가설하는 방법, 지간이 길면 가설비가 크고 가설거더의 처짐 발생 위험

### 경사 매달기식



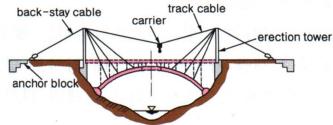


### 케이블식 가설공법

- Advantages to river, valley, sea
- Expansive, long preparation time
- Separate towers for bearing and cranes

Pontoon Method (일괄가설공법)

Manufacture whole structure  $\rightarrow$  Transportation  $\rightarrow$  Installation



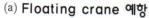



(b) 대선 예항



(c)트레일러 이용 방법


• Steel Bridges: Pontoon Method (일괄가설공법)


Floating Crane (Cranes set up on the barge)
Deliver the bridge span using the float crane







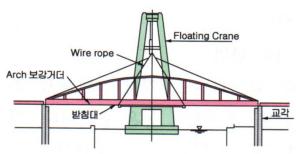

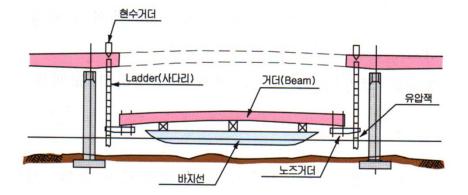


**Lift-up Barge**Set up lifting systems on the barge bents

• Cable Stayed Bridge (사장교)



### Cable Stayed Bridge

 주탑 위의 교각 상단에 설치한 케이블로 주형을 매단 구조물이며 케이블 장력을 조절하여서 각 구조부재의 단면력을 균등하게 분배하여 휨모멘트를 현저하게 감소시키므로 경간이 긴 교량을 경제적으로 설계할 수 있음

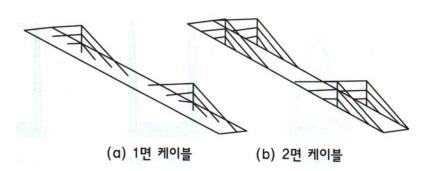


#### Single Cable


- Better appearance, narrow width, good view opening
- Need a median strip
- Need protection for twisting forces

#### **Double Cable**


- Wide width, Better for twisting forces → long span

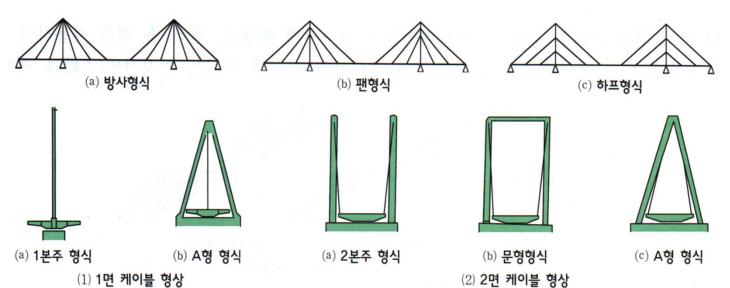


### Cable Stayed Bridge

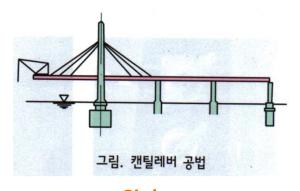


**Girder**Better stability
Easier construction

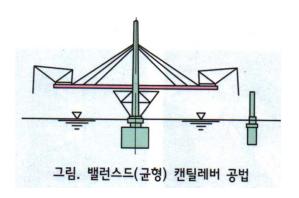

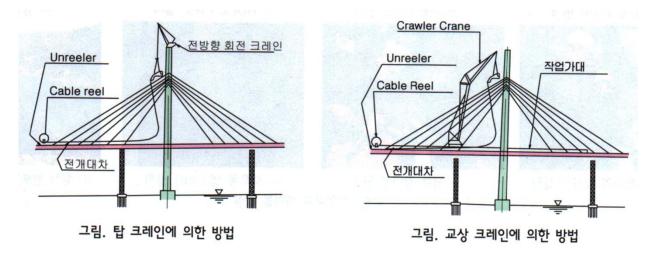

**Other: catwalk + winch** (will be explained for suspension bridges)

• Cable Stayed Bridge: Cable Installation

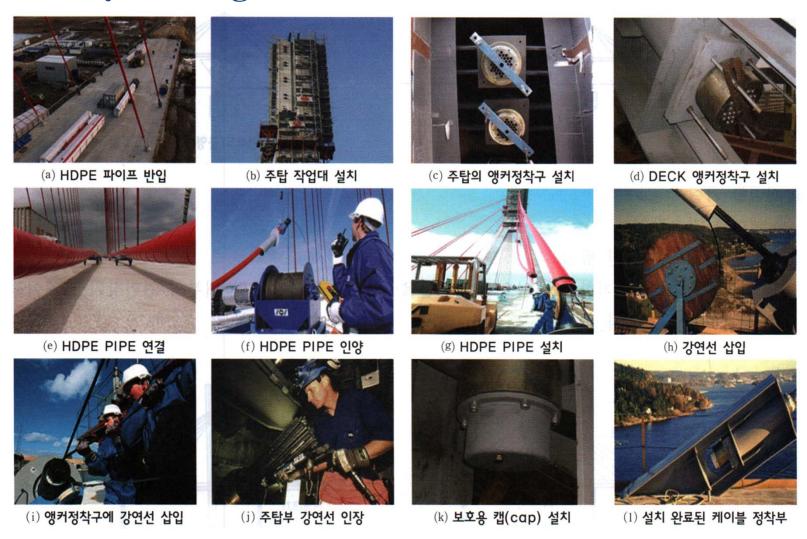

• Suspension Bridge (현수교)



• Suspension Bridge (현수교)

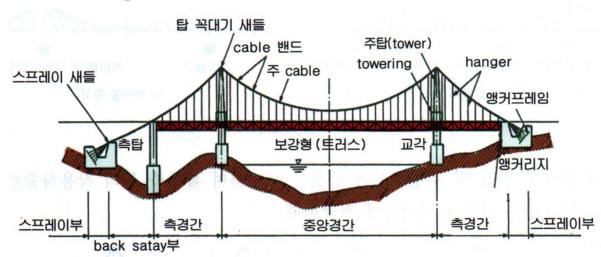










그림. 타정식 현수교(광안대교)


#### **Earth-anchored**:

Main tower  $\rightarrow$  main cable  $\rightarrow$  hanger  $\rightarrow$  girders

Self-anchored:

Main tower, temporary piers → girders → main cable → hanger → remove temporary piers

• Suspension Bridge (현수교)

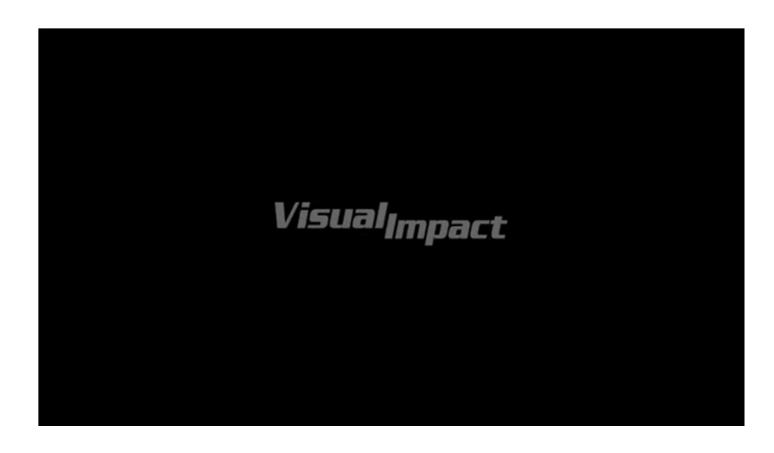

개 략 도 (FPRS) 살이	주요 공종
刀杢	① 기초공사
앵커리지	② 탑 가설 및 앵커리지 공사
크레인	③ 파이롯트 로프(pilot rope) 도해공사
catwalk rope	④ 홀링 로프 및 catwalk rope 가설
catwalk 	⑤ Catwalk 바닥 및 storm rope 가설
△트랜드 →	⑥ 주 케이블 (strand) 가설
케이블밴드 행어로프 :	⑦ 케이블 밴드 및 행어로프 가설
상판 보강형	⑧ 보강형 및 상판의 가설

**Pilot rope**: Temporary rope to guide cable installation processes

**Catwalk**: Temporary working platform for main cable installation processes

**Storm rope**: Wind protection for the catwalk, can be eliminated with high technology